


INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

RECESSED LINEAR COVE LUMINAIRE:
Model: LG-5001 RECESSED LINEAR COVE


SAVE THESE INSTRUCTIONS

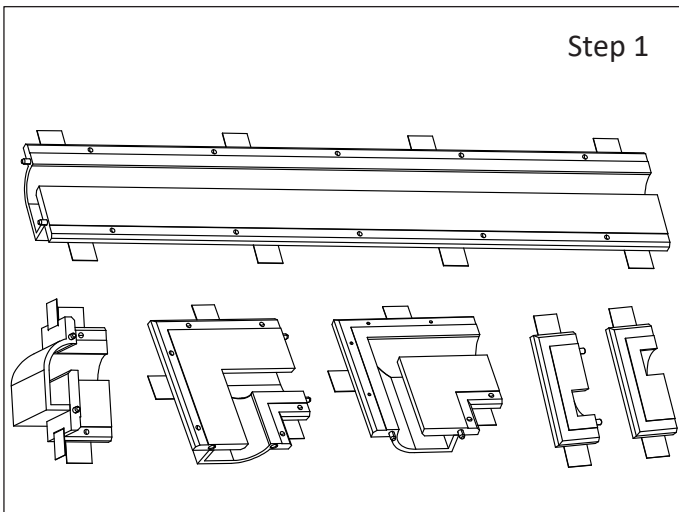

Step 1

Step 1 - Luminaire Parts and Tools for Installation:


- Unpack all Fixture Part and get to know them for easy Installation.

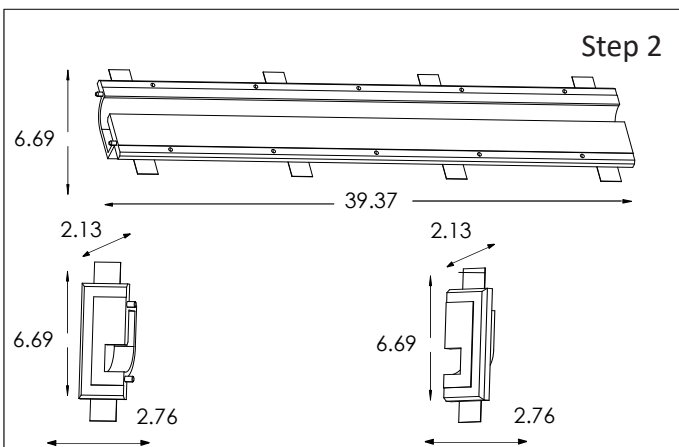

Step 2

Step 2 -Gathering Material to Build

- Create a pocket with the min depth of 2.5in D x 7in W x 44.89in L for one complete 4ft run length. If the run needs to be longer, just be sure to accommodate the end caps in your cut-out/

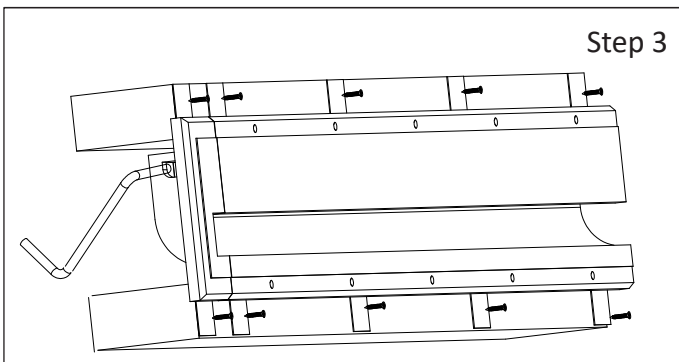

Step 3

Step 3 - Install Linear Cove to Wall or Ceiling


- Start by Aligning the LG-5002 between wood joist and secure with screws through nailing fins.
- Run DC 12v/24v wires from remote driver through hole in LG-5002
- Once LG-5002 is Intalled LG-5001 can be installed next

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING - Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE:


To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com.

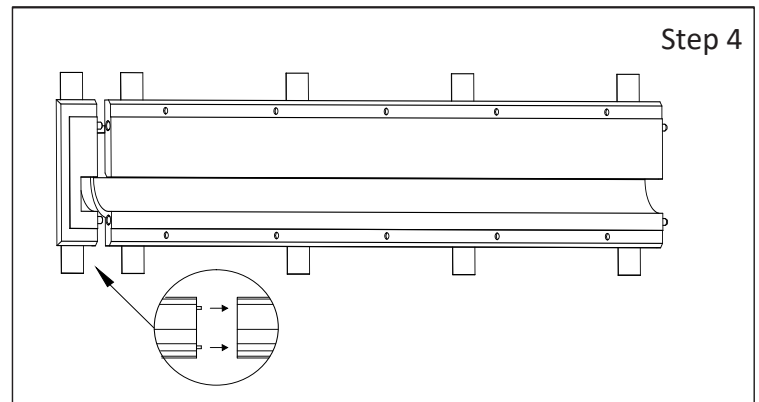

Step 4

Step 4 - Assemble Linear wall cove

- Align the pins of LG-5001 to the pin holes of LG-5002. **If the pins are not aligned, you may drill the holes bigger in order to align them properly. Or disregard them completely.**
- Depending on the desired arrangement of the fixture, (add comma) all parts are connected using the pin/pin hole system.
- Please assemble with care to prevent breaking the wood pins."

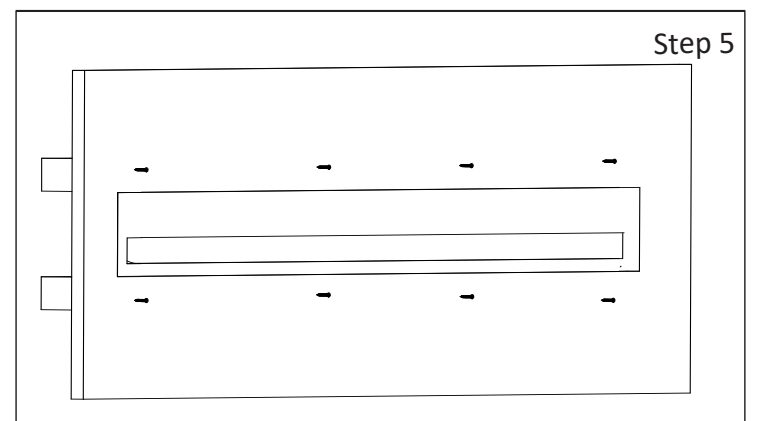

Step 5

Step 5 - Install Drywall

- Install drywall, keeping the aperture or opening of the extrusion clean and free of debris.

INSTALLATION INSTRUCTIONS

LiGHT & GREEN

LIGHTING COMPANY


SAVE THESE INSTRUCTIONS

PREPARING THE LUMINAIRE

RECESSED LINEAR COVE LUMINAIRE:

Model: LG-5001 RECESSED LINEAR COVE

Step 6

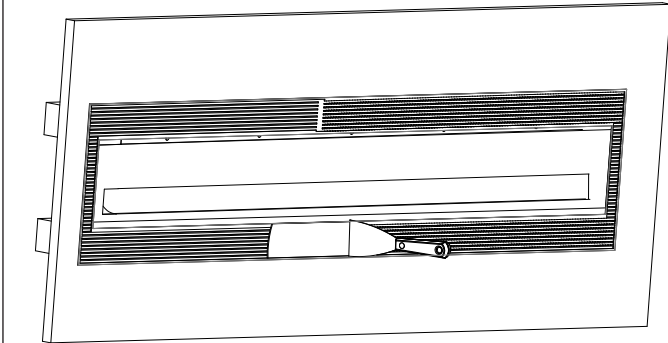

Step 6 - Plastering Wall Cut-Out with fixture

- Apply mudding tape to the outer area, making sure to leave the opening free.
- Mud is also required in the gaps between the extrusion and end caps. Remove excess mud from the opening using your finger or blunt object, making sure to keep the shape of the opening intact.
- Once plastering is complete, (add comma) sand the wall to have a smooth surface
- Paint wall

Step 7



Step 7 - Install LED Strip

- Attach LED linear tape light (by others) to power supply (also by others). Positive to positive (red wire to red wire) and negative to negative (black wire to black wire). This should be done via wire terminal or wire nut.
- Conceal wire connection with in the cove.
- Lay the LED tape light flat within the cove with the desired length.