


INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

NARROW RECESSED DOWN LIGHT:


Model: LG-7001 - 1X1 NARROWLINE TRIMMED SQUARE DOWNLIGHT

SAVE THESE INSTRUCTIONS

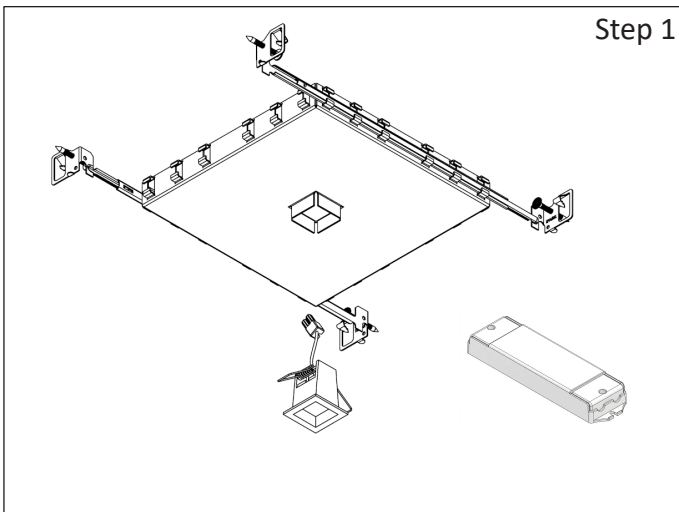

Step 1 - Luminaire Parts and Tools for Installation:

a. Unpack all fixture parts and get to know them for easy Installation.

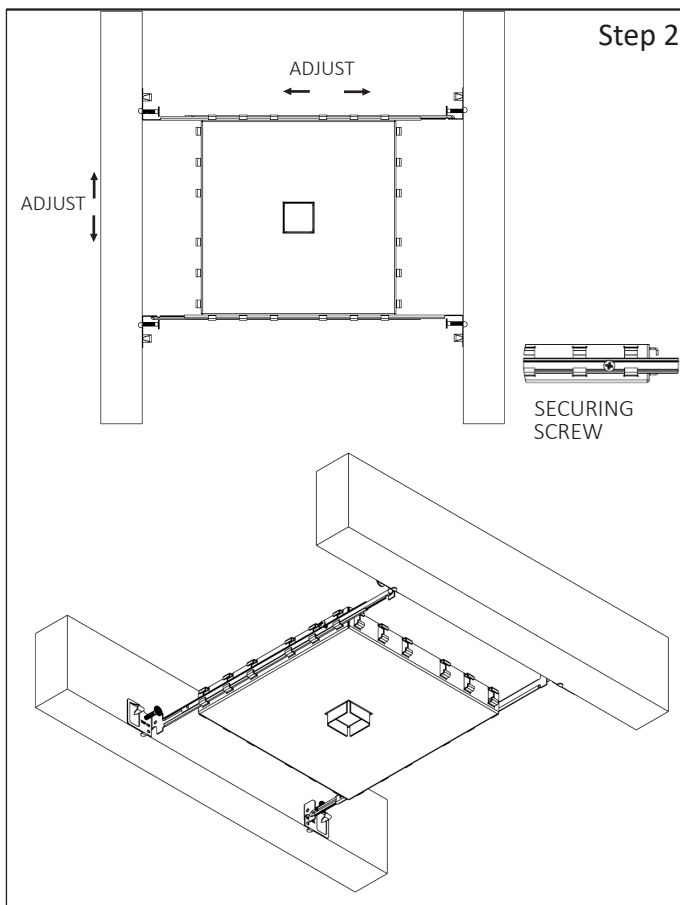

Step 2 - Align Plaster Frame to Wood Joist:


- Select section of the ceiling where you would like to install the fixture.
- Attach the hanger bars to the wood joists and secure using the captive nails.
- Adjust the plaster frame to the desired position between the joists and lock-in the position using the provided screws.

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING - Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.


NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com.

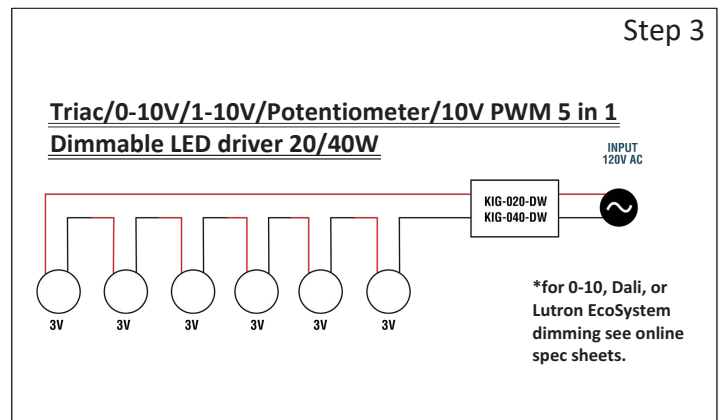

Step 3 - Remote AC Power and Fixture Connections:

- Connect power supply using conduit fitting (by others) to J-Box.
- Install AC Power and make wiring connections, see Wire Diagram.
- Run low voltage wires *IN SERIES to desired fixture locations.

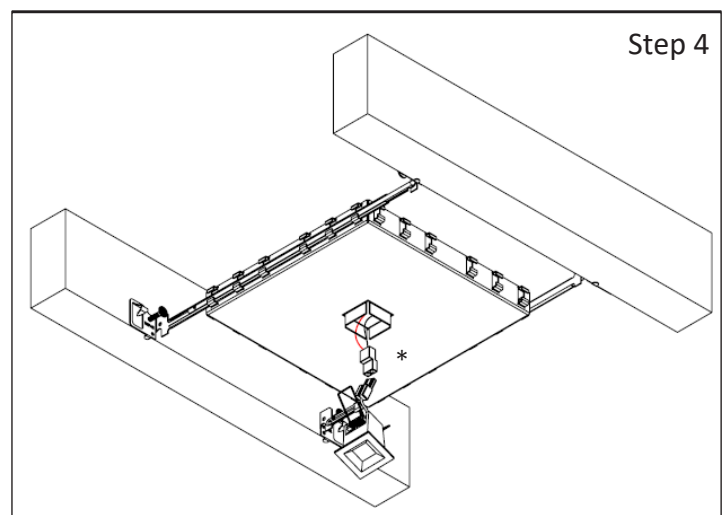

Step 4 - Test Led Trim fixture

- After pulling the lead wires, connect the LED driver to the fixtures using the quick connectors.
- Switch ON to test that the fixture lights up.
- Disconnect the LED TRIM and save until Step 7.


INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

NARROW RECESSED DOWN LIGHT:


Model:7001 - 1X1 NARROWLINE TRIMMED SQUARE DOWNLIGHT

SAVE THESE INSTRUCTIONS

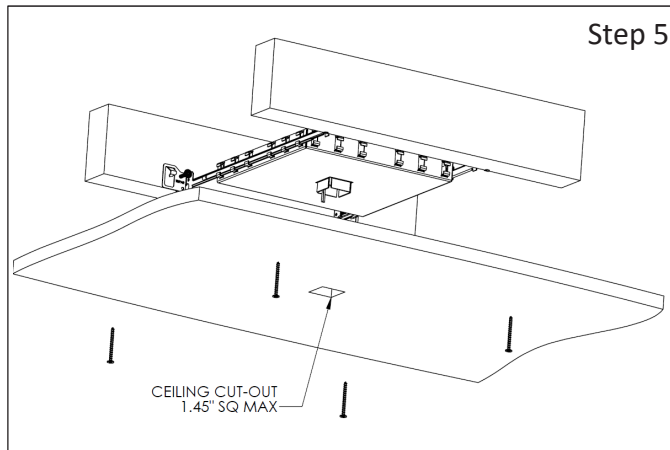


Step 5 - Cut-Out Dry-wall and Install to Ceiling Joist:

- Mark up the fixture centered on the drywall sheet and cut out.
- Align the cut-out with the fixture and secure the drywall to the ceiling.
- Make sure the fixture is flush and does not protrude through the drywall

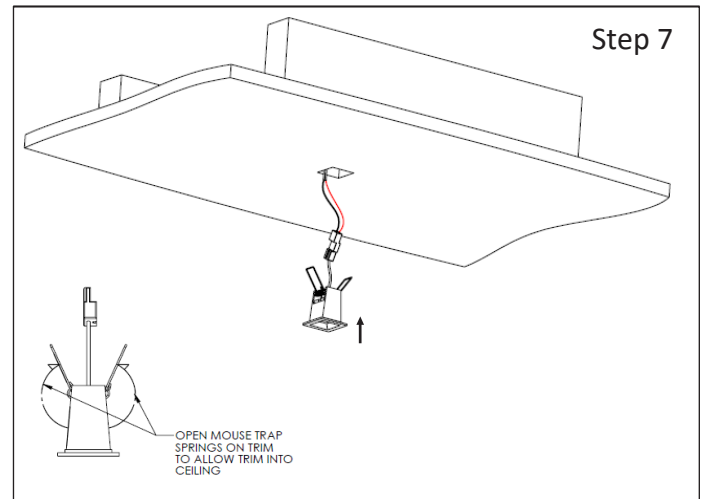

Step 7 - Connect & Insert Trim

- Connect trim to leads
- Open springs and insert trim into the ceiling / plaster frame.

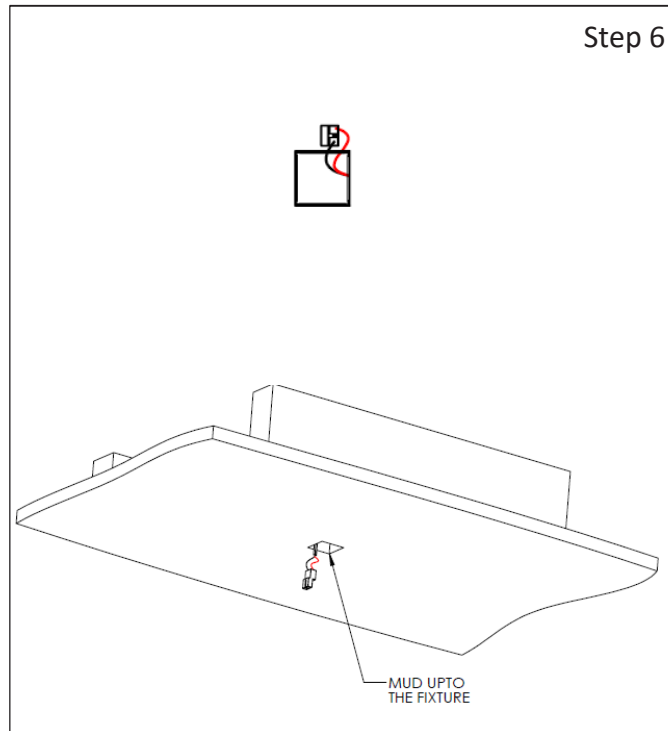


Step 6 - Plastering Ceiling Cut-Out with fixture & Paint:

- Mud up to the fixture and paint accordingly.
- Make sure no cracks or flaws are visible.

FINAL INSTALLATION

Step 8

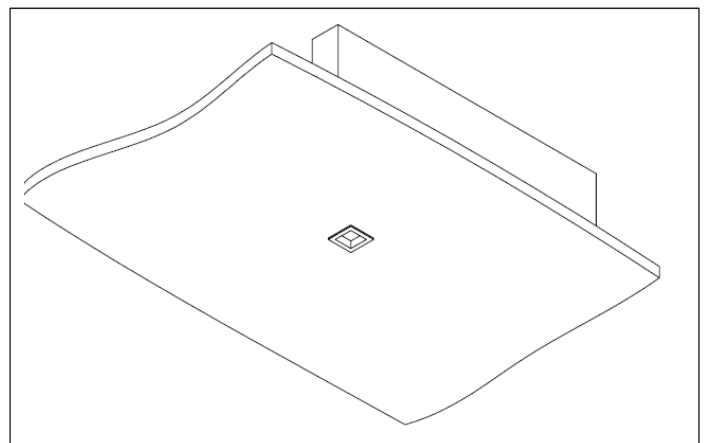

Step 8 FINALIZE INSTALLATION :

- Test Fixture to confirm it operates properly