


INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

NARROW RECESSED DOWN LIGHT:

Model: LG-7005TL - 1X5 NARROWLINE TRIMLESS SQUARE DOWNLIGHT

SAVE THESE INSTRUCTIONS

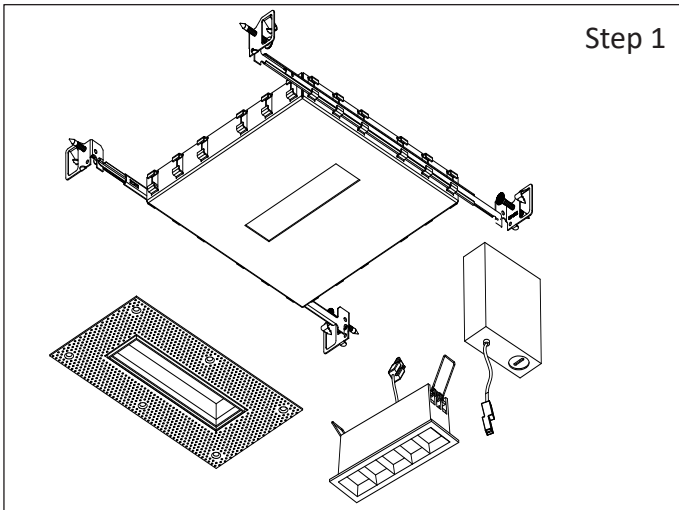

Step 1


READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING - Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com


Step 1 - Luminaire Parts and Tools for Installation:
a. Unpack all Fixture parts and get to know them for easy Installation.

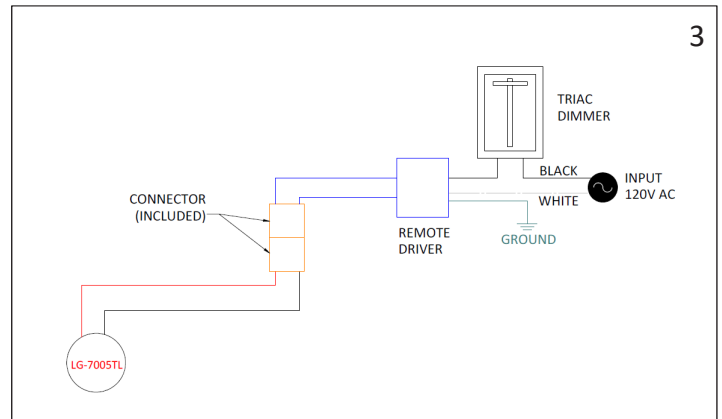


3

Step 3 - Install Remote Transformer or Led Driver:

- Wire the transformer to 120v per above diagram.
- Pull LED leads through aperture

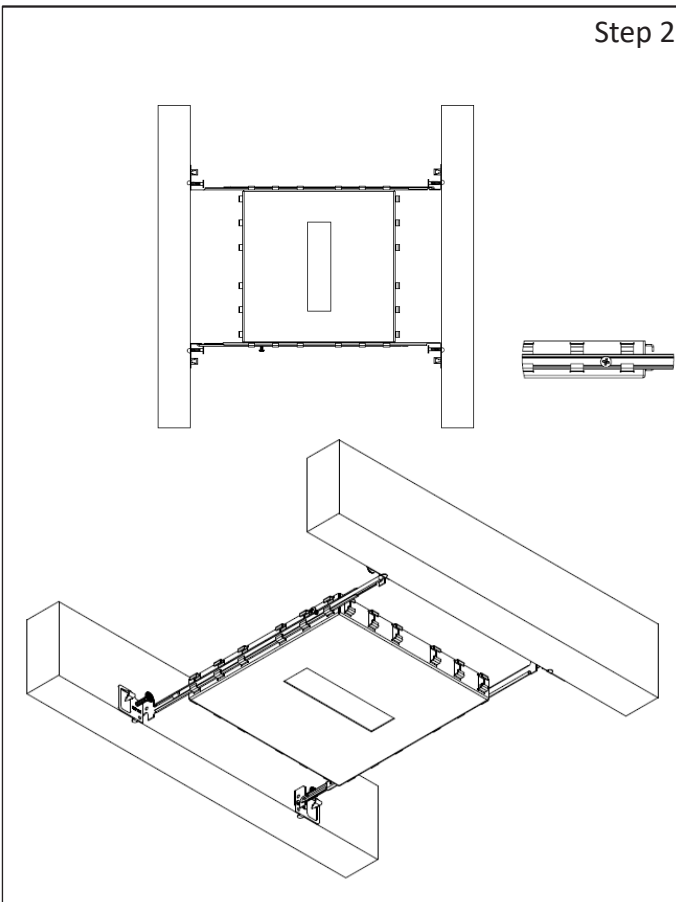

Step 2

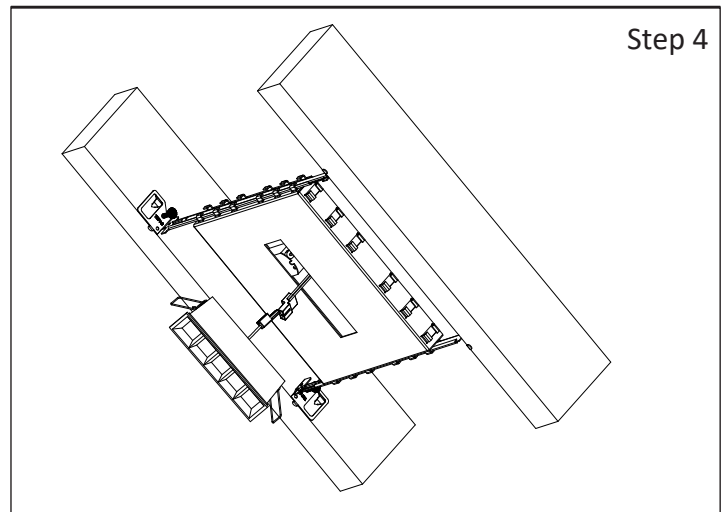

Step 4

Step 4 - Test Led Trim fixture

- After pulling the lead wires, connect the LED driver to the fixtures using the quick connectors.
- Switch ON to test that the fixture lights up.
- Disconnect the LED TRIM and save until Step 7.

Step 2 - Align Hanger Bar to Wood Joist:

- Select section of the ceiling where you would like to install the fixture.
- Attach the hanger bars to the wood joists and secure using the captive nails.
- Adjust the plaster frame to the desired position between the joists and lock-in the position using the provided screws.


INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

NARROW RECESSED DOWN LIGHT:

Model:7005TL - 1X5 NARROWLINE TRIMLESS SQUARE DOWNLIGHT


SAVE THESE INSTRUCTIONS

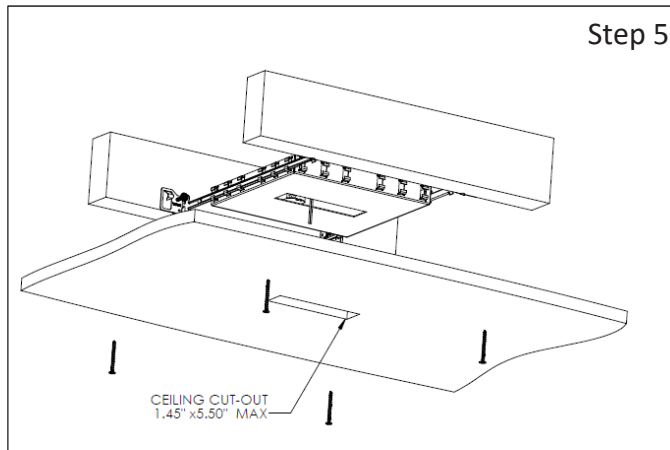

Step 5

Step 5 - Cut-Out Dry-wall and Install to Ceiling Joist:


- Mark up the fixture centered on the drywall sheet and cut out.
- Align the cut-out with the fixture and secure the drywall to the ceiling.
- Make sure the fixture is flush and does not protrude through the drywall

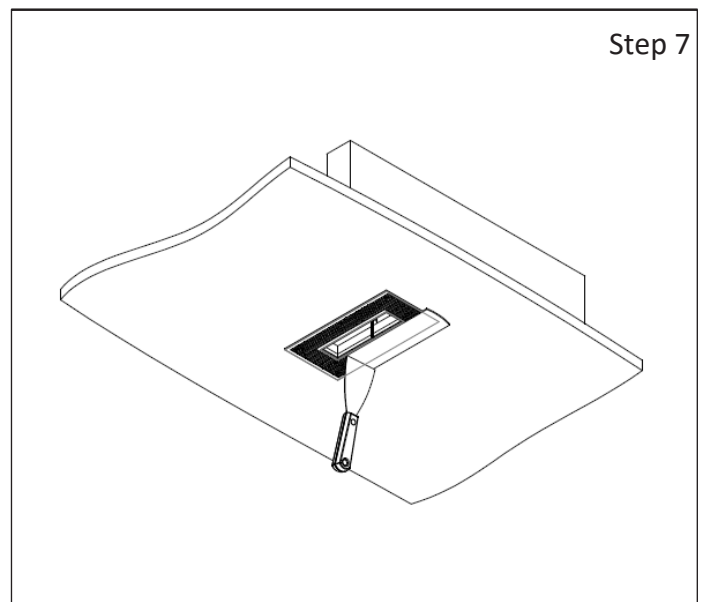

Step 7

Step 7 - Plaster mesh and paint


- Connect trim to leads
- Open springs and INSERT the trim into the ceiling / plaster frame.

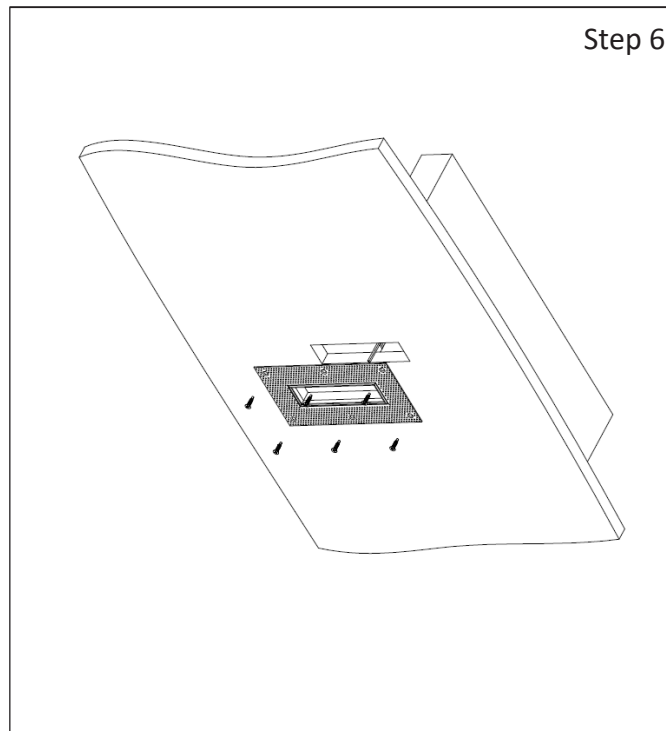

Step 6

Step 6 - Attach mesh to the drywall

- Mud up to the fixture and paint accordingly.
- Make sure no cracks or flaws are visible.

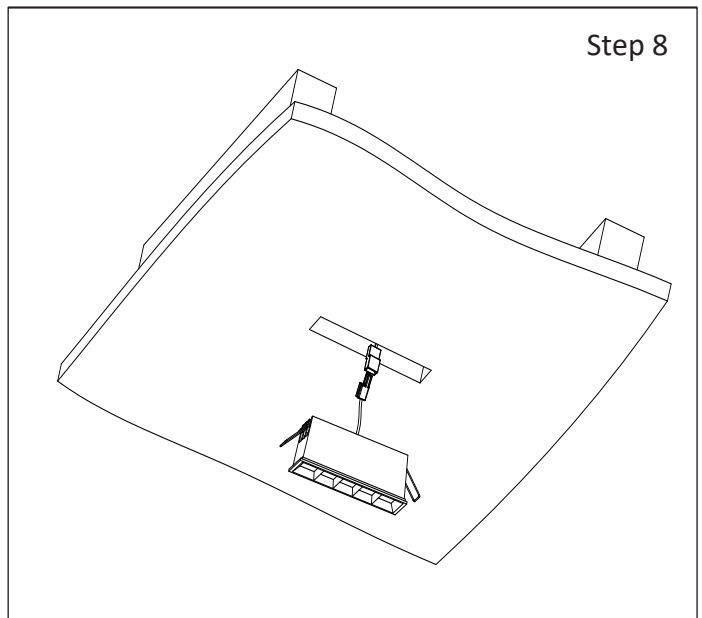

Step 8

Step 8 FINALIZE INSTALLATION :

- Test fixture to confirm it operates properly.

INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

NARROW RECESSED DOWN LIGHT:



Model:7005TL - 1X5 NARROWLINE TRIMLESS SQUARE DOWNLIGHT

LiGHT & GREEN
LIGHTING COMPANY

SAVE THESE INSTRUCTIONS

FINAL INSTALLATION

Step11

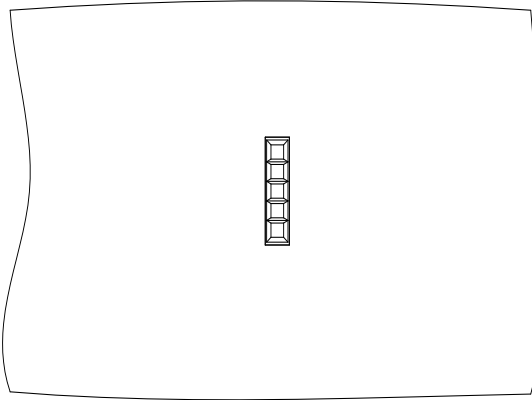

Step 11: Finalize Installation

- a. Test Fixture to confirm it operates properly.

