

INSTALLATION INSTRUCTIONS


PREPARING THE LUMINAIRE

RECESSED CEILING MOUNT LUMINAIRE:

Model:BOOST LG-9021W/22W/23W/24W/25W


LIGHT & GREEN
LIGHTING COMPANY

SAVE THESE INSTRUCTIONS

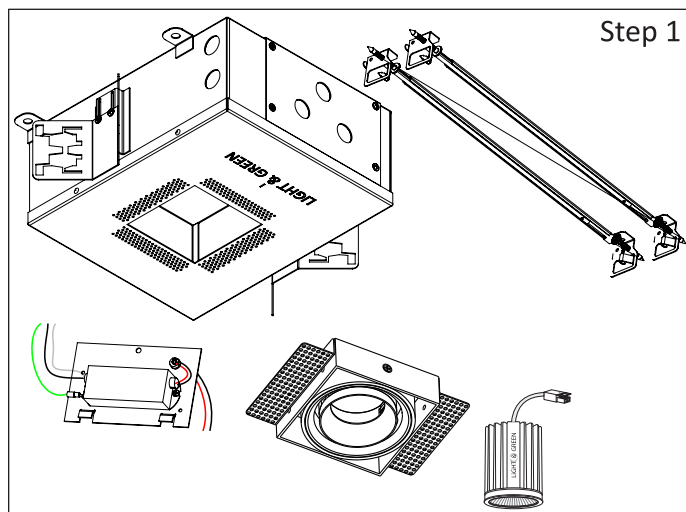


Step 1 - Luminaire Parts and Tools for Installation:

a. Unpack all Fixture Part and get to know them for easy Installation.

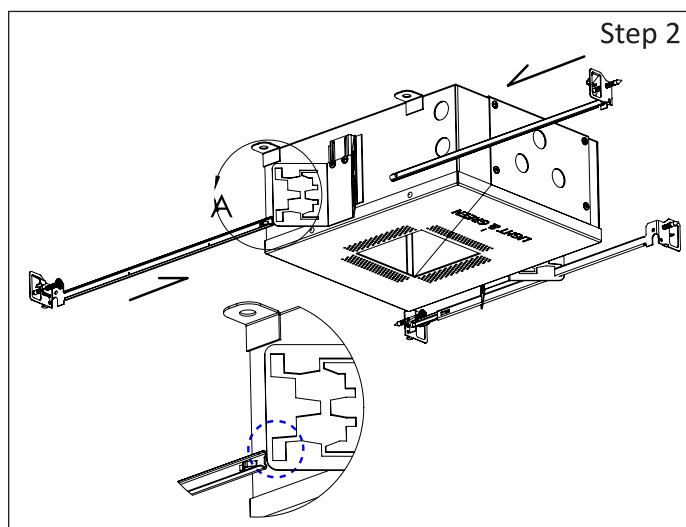

Step 2 - Install hanger bars to Fixture:

a. Align the hanger bars to the outside rectangular holes of butter fly bracket; indicated by dash circle. (Provided).

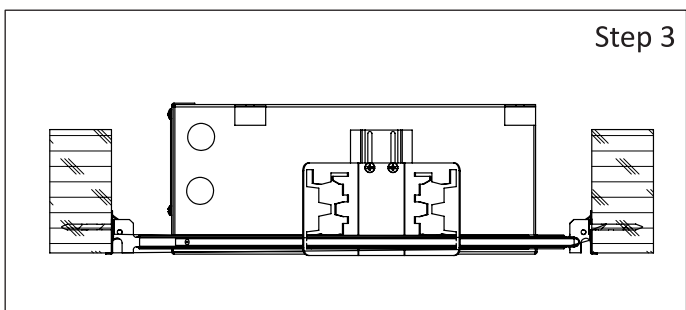

Step 3 - Install Fixture Assembly to Wood-Joist:


a. Select the location to Install this Fixture on Ceiling.
b. Place Hanger Bar to Wood Joist and secure using the captive Nails.
c. Assure that the housing aperture will be flush to the back of the drywall.
d. Adjust fix horizontally and secure using wire ties down.

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING - Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.


NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com.

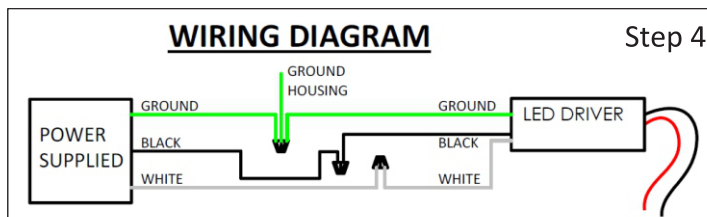


Step 4 - WIRING DIAGRAM

a. Review wiring Diagram before making any connections.

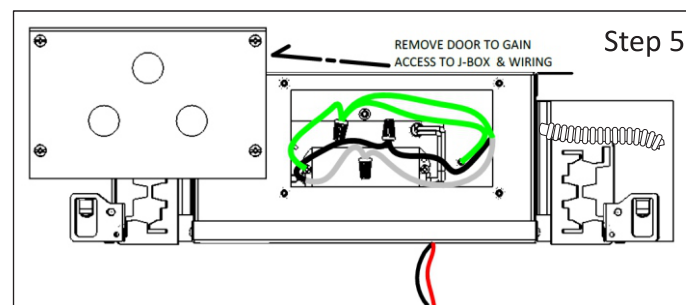

Step 5 - Install the Driver:

a. Remove j-box cover plate and attached conduit with line voltage to fixture.
b. Wire fixture per Wiring diagram in STEP 4, the close j-box with cover plate.

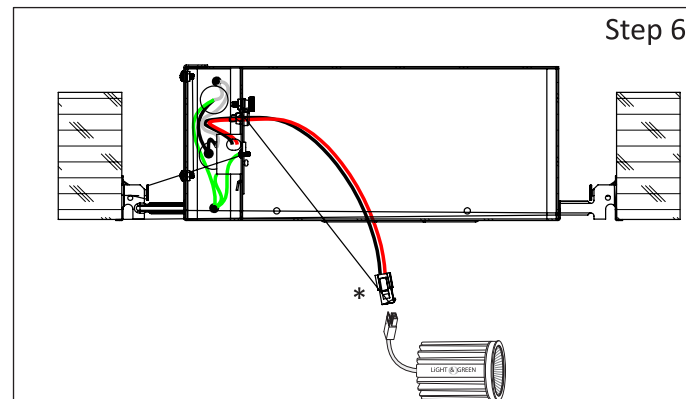

Step 6 - Install J-Box to Fixture:

a. "*" Indicates the (Quick Connector) come with the led module and must be connected to led driver; (red wire to red wire & black wire to black wire)
b. Connect the LED Light and turn Switch On to make sure it lights.

INSTALLATION INSTRUCTIONS


PREPARING THE LUMINAIRE

RECESSED CEILING MOUNT LUMINAIRE:

Model:BOOST LG-9021W/22W/23W/24W/25W


LiGHT & GREEN
LIGHTING COMPANY

SAVE THESE INSTRUCTIONS

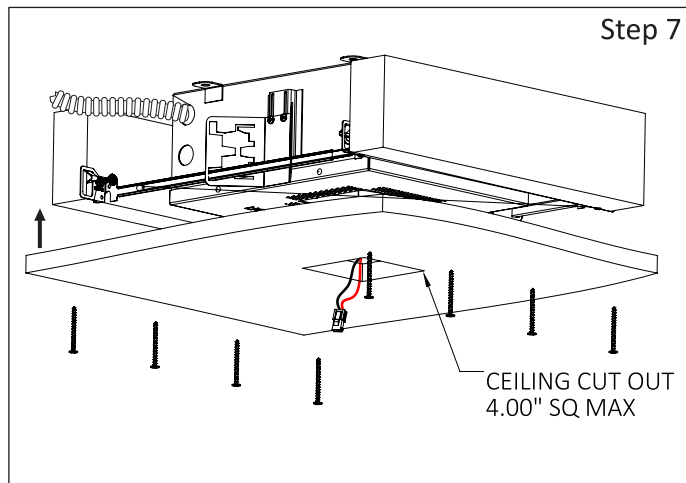


Step 7 - Cut-Out Dry-wall and Install to Ceiling Joist:

- Mark the Fixture location on Dry-wall "Sheet" and cut-out.
- Slide Fixture through butterfly brackets to Center the Ceiling Cut-out and Lock position using screw (provided).
- Align the Cut-out with Fixture.

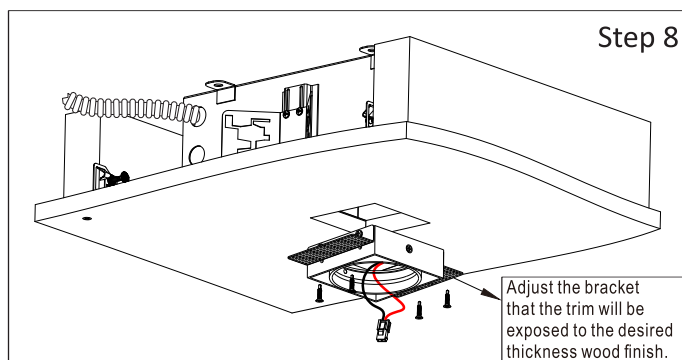


Step 8 - Attach Boost trim to Fixture:

- Align Boost trim assembly and insert in the Cut-out.
- Secure Boost trim assembly with plaster/sheetmetal screws((4) By others)

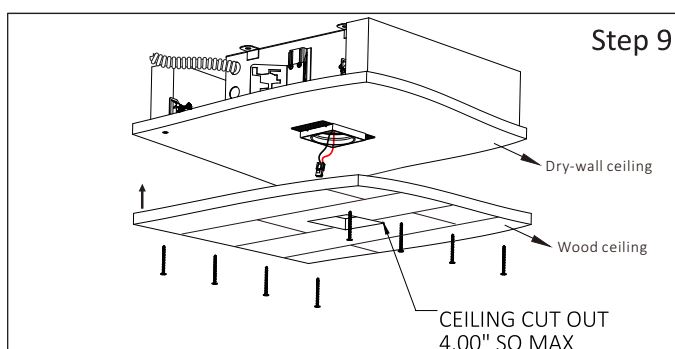


Step 9 - Cut Wood Ceiling to Match Fixture Trim:

- Measure the ceiling area and mark where the trim edges will go using a level.
- Cut the wood panels to length with a miter saw or circular saw, ensuring they fit snugly against the trim.
- Start installing from one end, aligning the panels with your marked lines. Secure them with adhesive or nails.
- Continuously check with a level to ensure straight alignment.
- Fill any gaps or holes with wood filler and sand as needed. That's it! You'll have a wood ceiling that matches your trim perfectly.

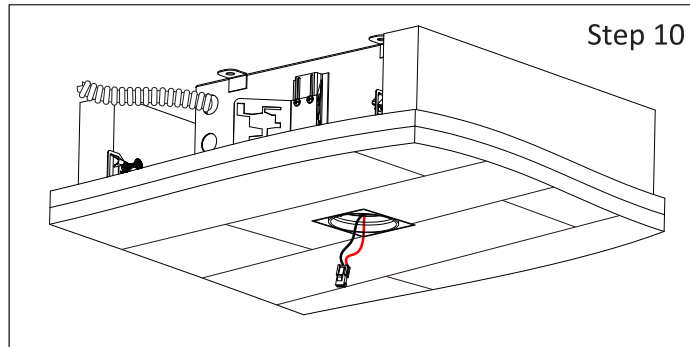

Step 10 - Check finished surface:


- Make sure no crack or flaws are visible

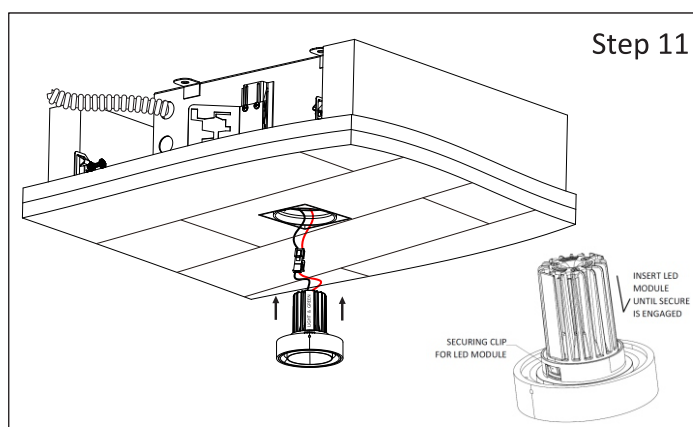

Step 11 - : Install LED

- Remove inner lamp ring and insert led module into inner lamp ring.
- Connect LED Light and insert through Fixture.
- Insert Led assembly in to fixture, once feel the click the led module is secured in the fixture.

FINAL INSTALLATION

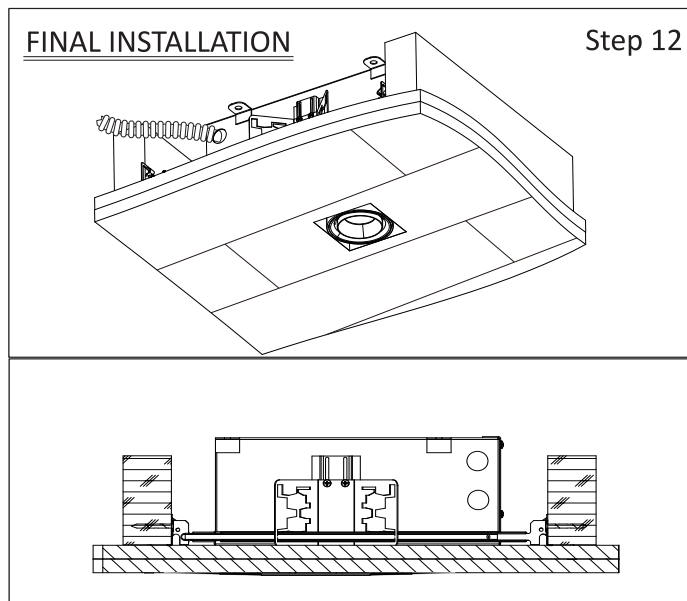

Step 12 - FINALIZE INSTALLATION

- Test fixture to confirm it operates properly.