

INSTALLATION INSTRUCTIONS


PREPARING THE LUMINAIRE

RECESSED CEILING MOUNT LUMINAIRE:

Model: BOOST LG-9021-T 3" TRIMMED ADJUSTABLE SQUARE DOWNLIGHTS


LIGHT & GREEN
LIGHTING COMPANY

SAVE THESE INSTRUCTIONS

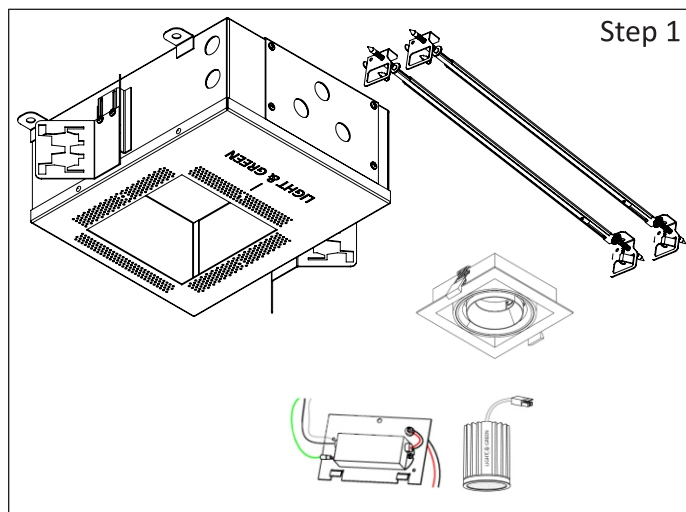


Step 1 - Luminaire Parts and Tools for Installation:

- Unpack all Fixture Part and get to know them for easy Installation.

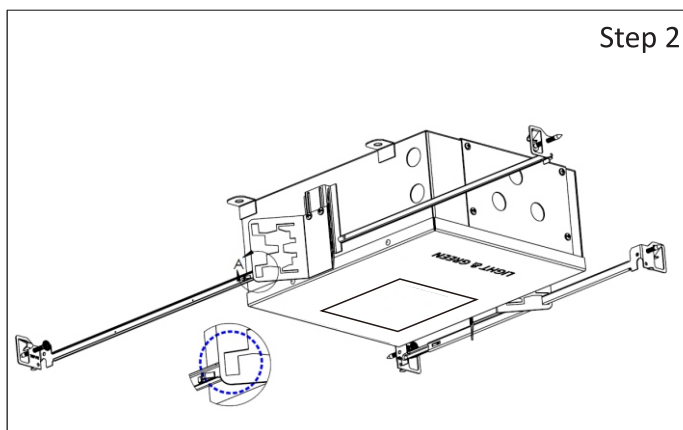

Step 2 - Install hanger bars to Fixture:

- Align the hanger bars to the outside rectangular holes of butterfly bracket; indicated by dash cir. (Provided).

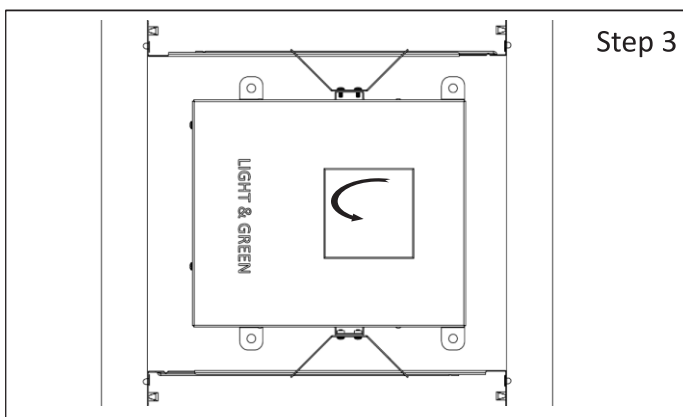

Step 3 - Adjust collar plate:


- Align collar plate to be parallel to walls and secure (3) flat head screws. (provided)

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING - Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.


NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com.

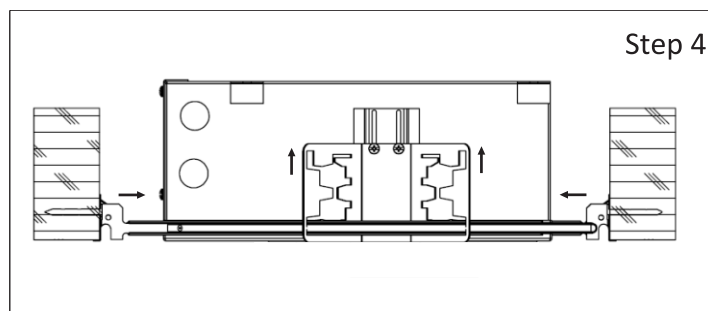


Step 4 - Install Fixture Assembly to Wood-Joist:

- Select the location to Install this Fixture on Ceiling.
- Place Hanger Bar to Wood Joist and secure using the captive Nails.
- Adjust fixture vertical so that the surface of the fixture sits flush with top of the finished ceiling surface. Vertical adjust can be made by loosening the screws on both mounting butterfly bracket.
- Adjust fixture horizontally and secure using wire ties down.

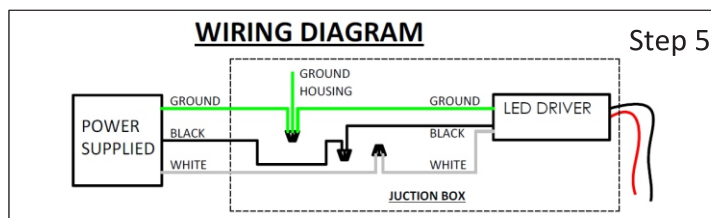

Step 5 - WIRING DIAGRAM

- Review wiring Diagram before making any connections.

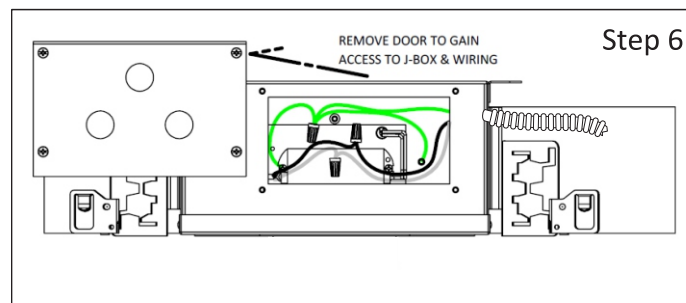

Step 6 - Install the Driver:

- Remove j-box cover plate and attached conduit with line voltage to fixture.
- Wire fixture per Wiring diagram in STEP 5, then close j-box with cover plate.

INSTALLATION INSTRUCTIONS


PREPARING THE LUMINAIRE

RECESSED CEILING MOUNT LUMINAIRE:

Model: BOOST LG-9021-T 3" TRIMMED ADJUSTABLE SQUARE DOWNLIGHTS

LIGHT & GREEN
LIGHTING COMPANY


SAVE THESE INSTRUCTIONS

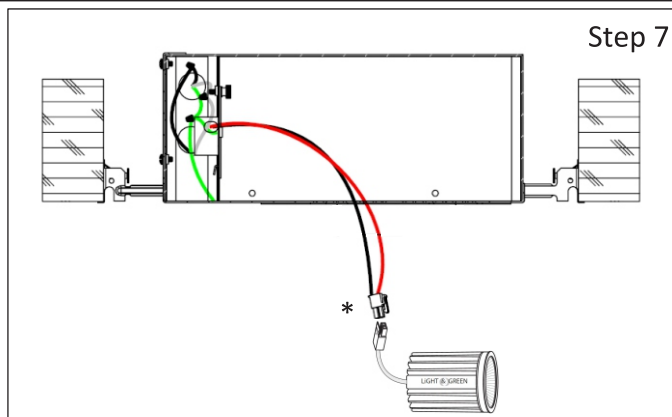

Step 7

Step 7 - Install J-Box to Fixture:


- "*" Indicates the (Quick Connector) come with the led module and must be connected to led driver; (red wire to red wire & black wire to black wire)
- Connect the LED Light and turn Switch On to make sure it lights.
- Disconnect led module & save until STEP 11

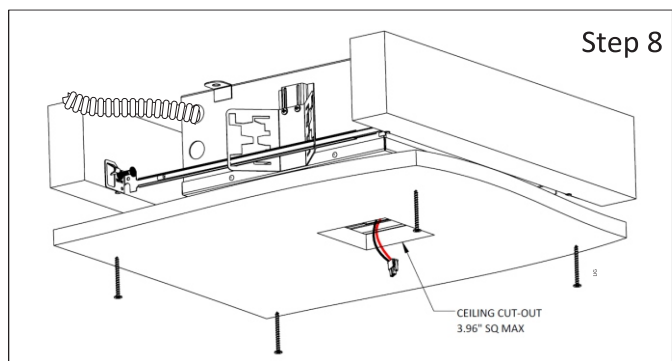

Step 8

Step 8 - Cut-Out Dry-wall and Install to Ceiling Joist:


- Mark the Fixture location on Dry-wall "Sheet" and cut-out.
- Align the Cut-out with Fixture and secure drywall
- Make sure that the fixture is flush & DOES NOT PROTRUDE drywall.

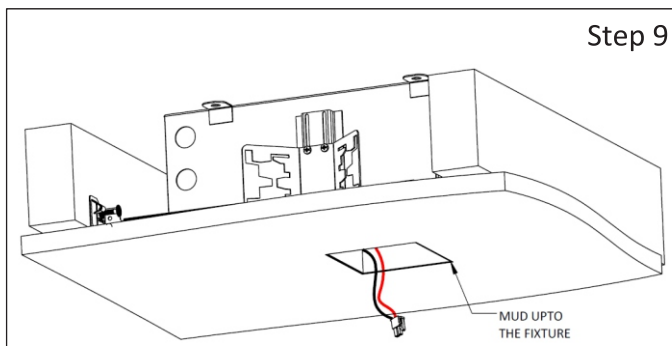

Step 9

Step 9 - Plastering Ceiling Cut-Out with fixture and Paint:


- Mud up to the fixture and paint.

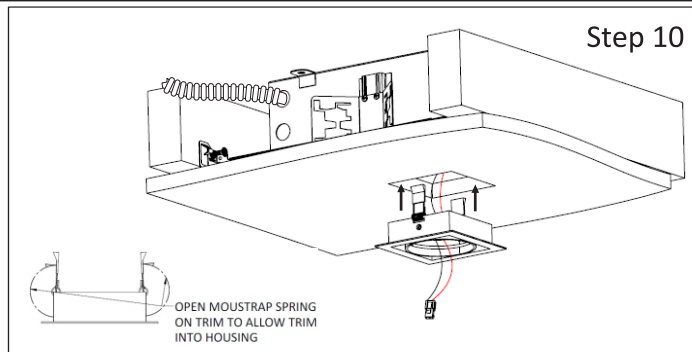

Step 10

Step 10 - Check finished surface & Insert Trim :

- Make sure no crack or flaws are visible
- Open mouse trap springs & insert trim in housing

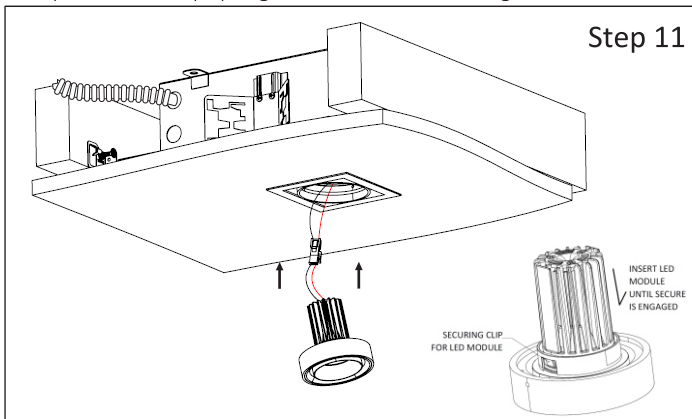


Step 11

Step 11 - Install LED:

- Remove inner lamp ring and insert led module into inner lamp ring.
- Connect LED Light and insert through Fixture.
- Insert Led assembly in to fixture, once feel the click the led module is secured in the Trim.

FINAL INSTALLATION

Step 12

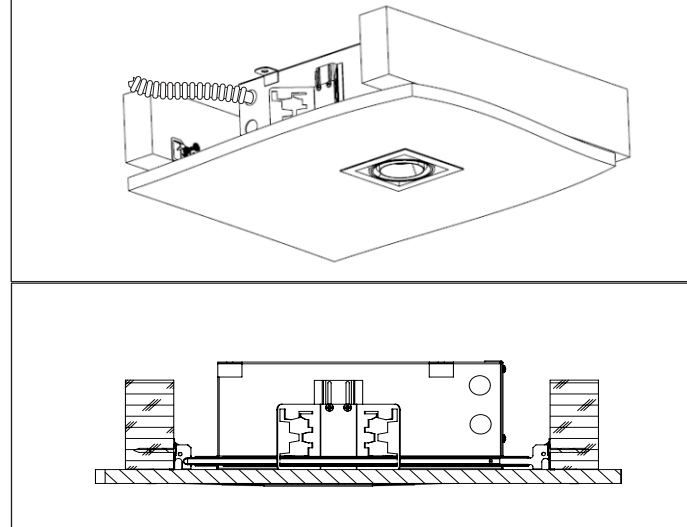

Step 12 - FINALIZE INSTALLATION

- Test fixture to confirm it operates properly.