

INSTALLATION INSTRUCTIONS

PREPARING THE LUMINAIRE

RECESSED AND SURFACE MOUNTED - MODEL: MONO POINT
LG-LD51488C-AL/LG-LD51488-AB/LG-LD51488-B


SAVE THESE INSTRUCTIONS

WARNING: Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE: To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lightandgreen.com

A. Recessed For Drywall Ceiling


1. 4" Standard J-box (Not Included)
2. A-B-PLATE
3. Drywall Ceiling (Not Included)
4. A-BP (P)
5. A-B LEG (STEM)
6. Mono Point

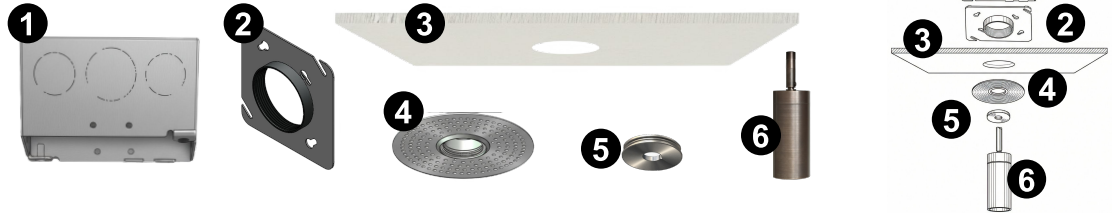

1. Install Junction Box: Secure the 4" standard J-box between ceiling studs at the desired fixture location. Ensure the box is properly aligned and firmly mounted / **2. Install Mounting Plate (A-B-Plate)** Attach the mounting plate directly to the junction box using the appropriate hardware. Verify the plate is level and centered / **3. Route Electrical Wiring:** Pull the supply wires into the junction box and prepare them for final connection. Leave sufficient wire length for the luminaire installation / **4. Install Drywall Ceiling:** Close the ceiling with drywall, ensuring the cutout is properly aligned with the junction box and mounting plate / **5. Mud in sand and paint** / **6. Connect The Wires:** Connect to the remote driver wire and screw in canopy plate to stem of mono point, then install whole fixture into mud-in plate.

B. Recessed For Wood Ceiling


1. 4" Standard J-box (Not Included)
2. A-B-PLATE
3. Wood Ceiling (Not Included)
4. A-BW (W,W1) Wood Ceiling Adapter Trimmed
5. A-B LEG (STEM)
6. Mono Point

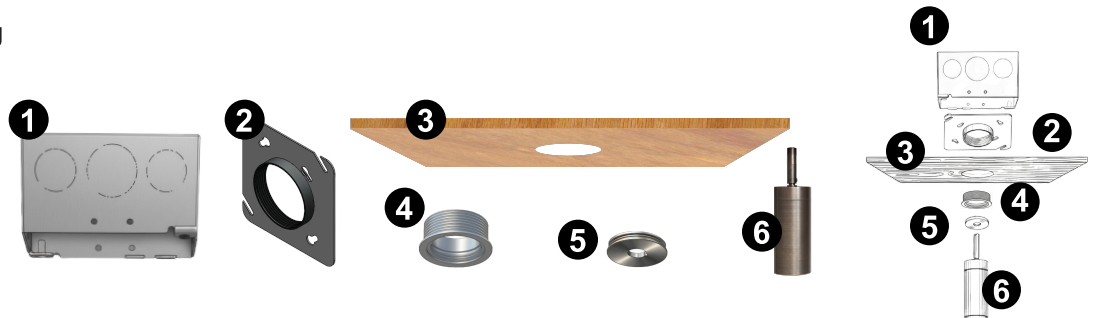

1. Install Junction Box: Secure the 4" standard J-box between ceiling studs at the desired fixture location. Ensure the box is properly aligned and firmly mounted / **2. Install Mounting Plate (A-B-Plate)** Attach the mounting plate directly to the junction box using the appropriate hardware. Verify the plate is level and centered / **3. Route Electrical Wiring:** Pull the supply wires into the junction box and prepare them for final connection. Leave sufficient wire length for the luminaire installation / **4. Install Wood Ceiling:** Close the ceiling with either wood or drywall, then wood. Millworker to ensure cutout is properly aligned with the j-box and mounting plate. / **5. After the wood ceiling, install wood ceiling adapter to accommodate the new ceiling thickness.** / **6. Connect The Wires:** Connect to the remote driver wire and screw the mono point fixture stem to the canopy plate.

C. Surface Mounted

1. 3" Standard J-box (Not Included)
2. Wood / Drywall Ceiling (Not Included)
3. Mono Point

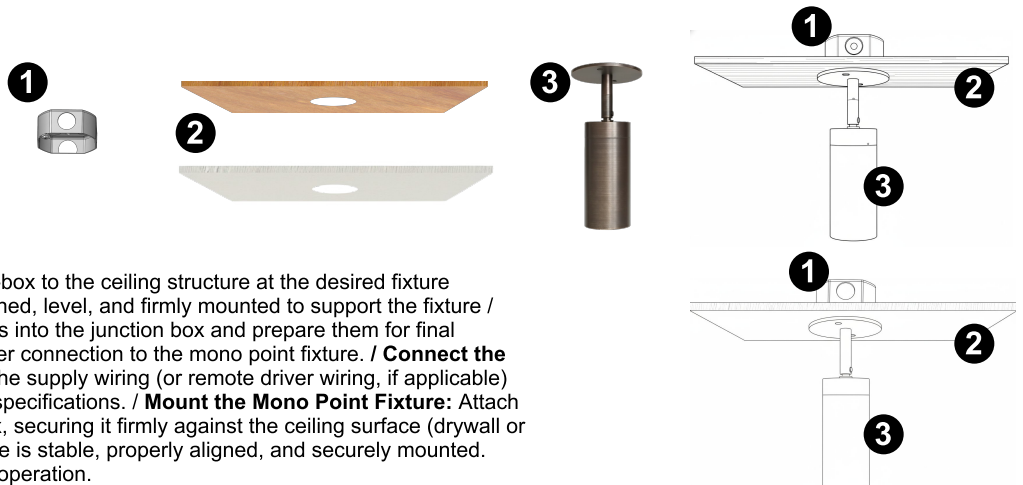

1. Install Junction Box: Secure the 3" standard J-box to the ceiling structure at the desired fixture location. Ensure the junction box is properly aligned, level, and firmly mounted to support the fixture / **2. Route Electrical Wiring:** Pull the supply wires into the junction box and prepare them for final connection. Leave sufficient wire length for proper connection to the mono point fixture. / **Connect the Wires:** Connect the mono point fixture wires to the supply wiring (or remote driver wiring, if applicable) according to electrical codes and manufacturer specifications. / **Mount the Mono Point Fixture:** Attach the mono point fixture directly to the junction box, securing it firmly against the ceiling surface (drywall or wood ceiling) / **6. Final Check:** Ensure the fixture is stable, properly aligned, and securely mounted. Restore power and test the luminaire for proper operation.